



Anti-Tamper Kit for Shop Air Adapters

For Use with Plant Air, Compressors, and Bottled Air

To Install and Operate Anti-Tamper Kit

1. Set regulator to desired pressure.
2. 2 PSI is the recommended setting on the regulator.
3. Do not use pressures in excess of 4 psi.
4. Disconnect air for rest of installation of anti-tamper kit.
5. Remove aluminum cap on top of regulator.
6. Remove lock washer, black knob and spring.
7. Install white knob, lock washer and black cap

