



## GT MultiPump Dispensing System for New Installation

For Use with Plant Air, Compressors, and Bottled Air

[www.goatthroat.com](http://www.goatthroat.com) (646) 486 3636

### INSTRUCTIONS

#### To Install and Operate

1. Remove the pressure relief valve knob from your pump.
2. Install attached o-ring on each pump body where the pressure relief cap was.
3. Screw Pump adapter - # BGA-MSC-01 on in place of the cap. Keep the cap in a safe place.
4. Assemble both parts of Manifold System, part #BGA-MSC-01.
5. Place Manifold as near to drums as possible to increase effectiveness of air.
6. Add your own air hoses as necessary between manifold and pumps
7. Make sure the pressure regulator knob is completely closed.
8. Connect air hose from shop air or compressor to the inlet port.
9. Lift knob on regulator and turn clockwise to 2 PSI. Allow air to fill all vessels. You may want to increase pressure to 4psi.
10. The external safety relief valve will open automatically if air pressure exceeds 6-7 PSI. If this happens please reduce air pressure and close the safety relief valve completely.
11. If supplied, use anti-tamper kit to eliminate over-pressurizing vessels. See additional instructions.

