

High Pressure Adapter Barrel Set Up Instructions

Set-Up

Part 1


Prepare the siphon tube



1 Assemble siphon tube kit per separate instructions. Place assembly next to barrel, foot piece on bottom



2 Mark tube at the top edge of the barrel. Make a second mark 4-inches above the first mark.

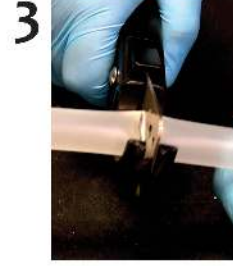

3 Make a straight cut at the second mark. A 55 G may be the correct length



4 Wrap the top of the tube with teflon tape around and across. This will secure tube on the pump.

Set-Up

Part 2

Prepare and install the pump.



1 If used, wrap buttress adapter with several layers of teflon tape.




2 Wrap pump adapter with several layers of teflon tape. Follow separate instructions for lock ring use if desired.




3 If used, thread pump adapter into buttress adapter for a tight fit. Keep this assembly together always.




4 Push siphon tube into bottom of pump, teflon toward the pump. Turn it during installation for the best fit.

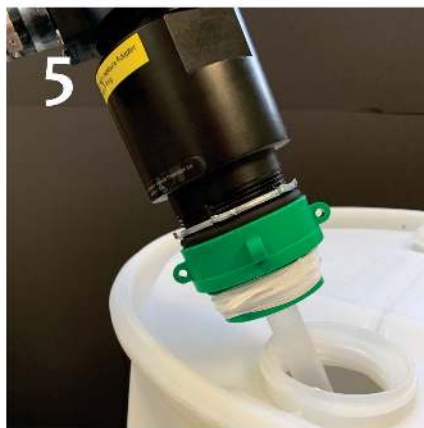

5 Remove closure from the thick thread side of the barrel. Install pump and tube assembly at a slight angle into the barrel.

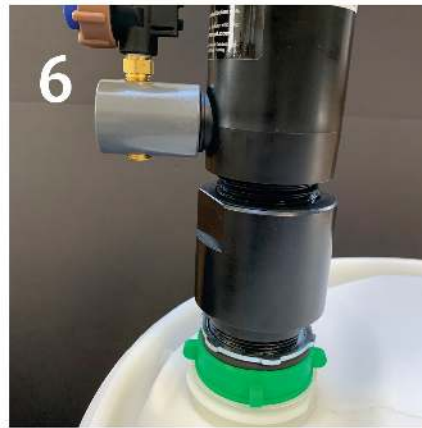

6 Straighten up pump assembly, and thread onto barrel making an air-tight fit. **TO REMOVE PUMP:** turn green buttress adapter only.

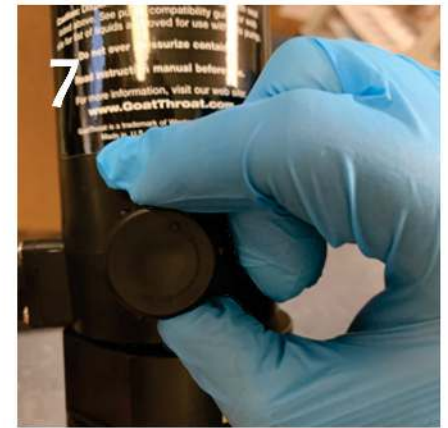

7 Ensure pressure release knob is tightly closed for operating. **BEFORE REMOVING PUMP:** release pressure.