


GoatThroat with Kalrez and Teflon

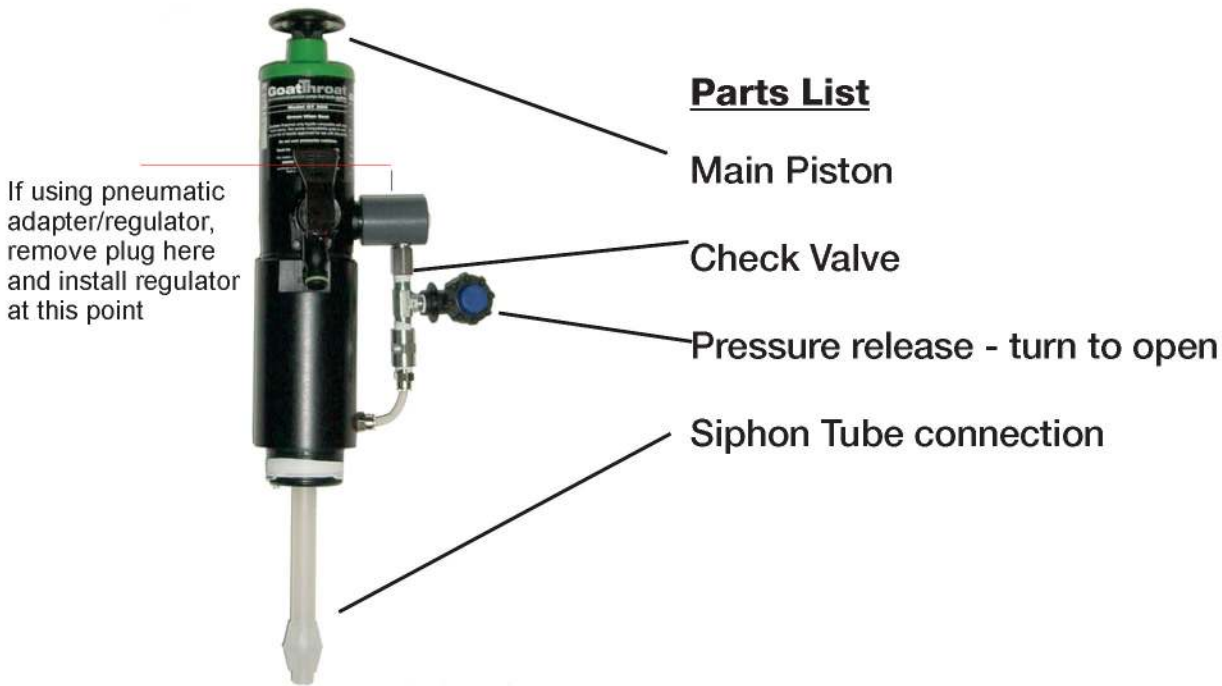

INSTALLATION INSTRUCTIONS

1. Wrap bottom of pump with several wraps of provided teflon tape.
2. Set up siphon tube:
 - a. Measure and write down the overall length of drum.
 - b. Assemble tubes and connectors per page 9 of instruction manual - steps 1 and 2.
 - c. Cut to 3 1/8-inch less than the height of the drum.
 - d. Assemble to siphon tube connection on pump.
 - e. Insert pump and tubes into 2-inch pipe threaded side of drum, and screw into bung hole 5 - 6 turns, with the final position of the pump facing forward.

OPERATING INSTRUCTIONS

1. Follow instructions on page 11 of the instruction manual.
2. To release pressure after use, open the pressure release valve by turning counter-clockwise.
3. We have provided extra o-rings for the bottom of the device. Between barrels, you may want to switch them out to allow out-gassing.